




# Hard Top Sun Canopy and Weather Shield

Installation guide for Aspire Odin Scooter


**Canopy code** SCA668690 | **Bracket code** Odin SCA668660

## What you'll need

1. 12mm spanner
2. 13mm spanner
3. 10mm T-head socket spanner
4. Pneumatic or electric drill
5. 10mm drill bit
6. Phillips screw driver

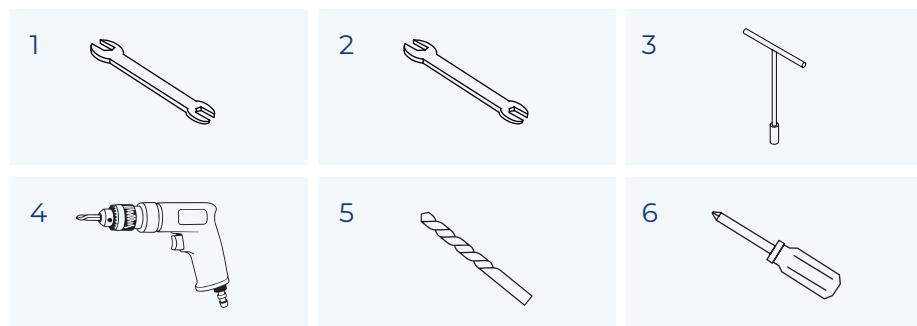

## What's included

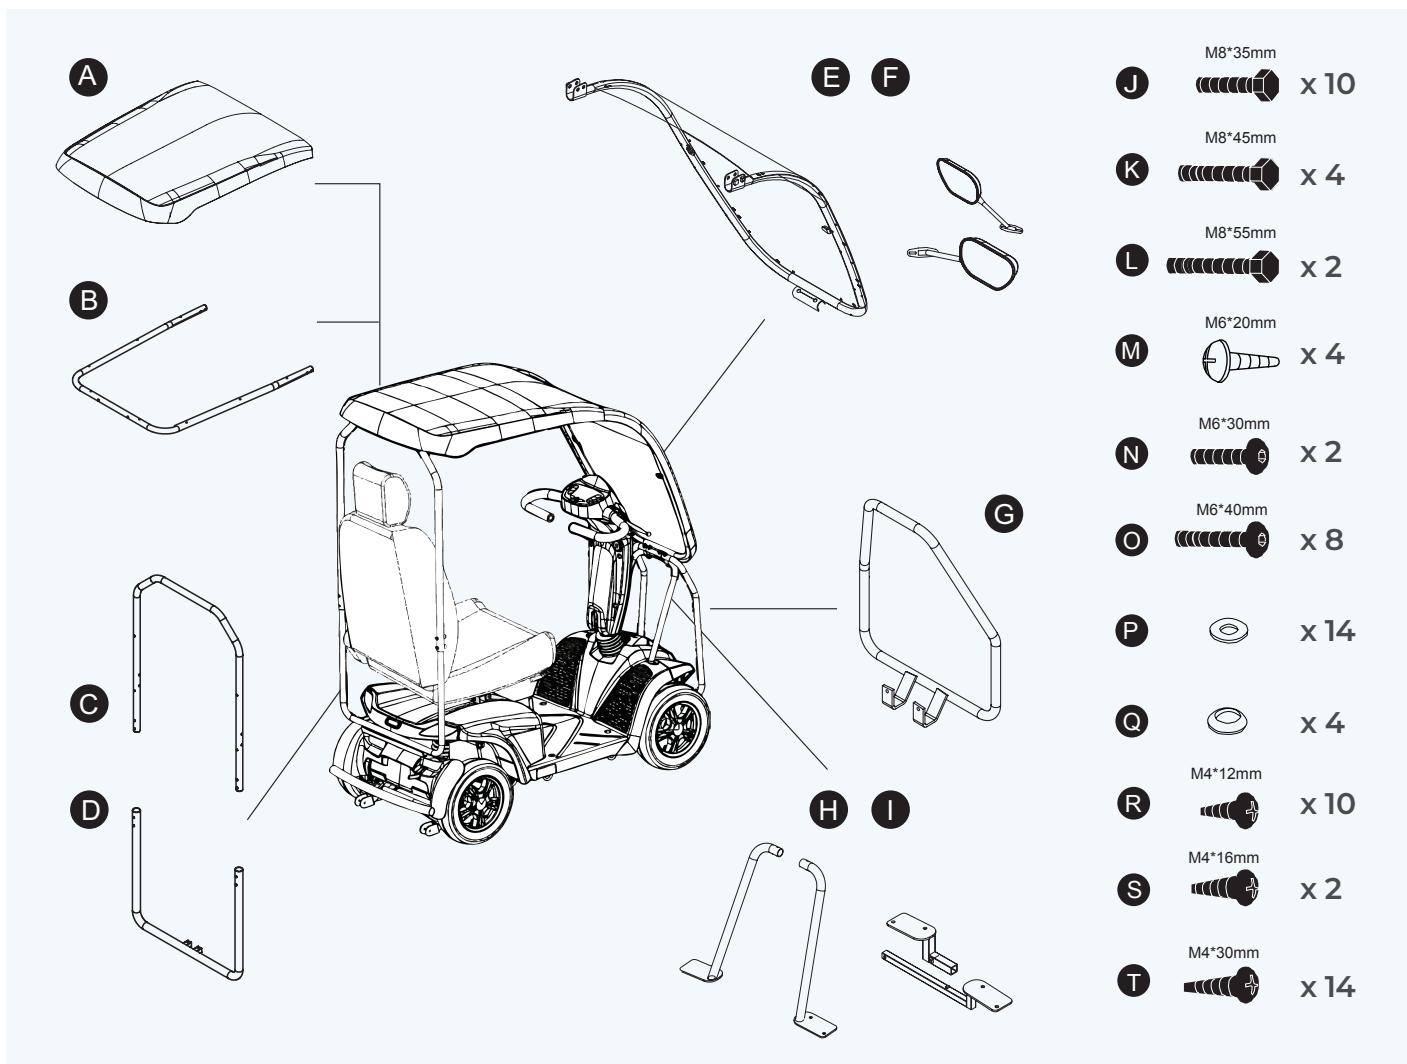


**NB** All images are for illustration only.

# Installation Steps

## Hard Top Sun Canopy | Aspire Odin Scooter


Follow steps below in order when selecting what to fix to the scooter.

### STEP 1

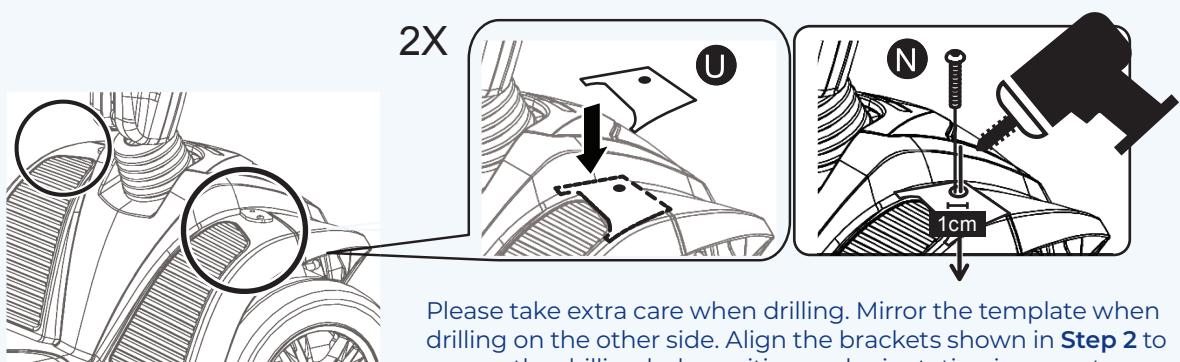


Please take extra care when drilling. Mirror the template when drilling on the other side. Align the brackets shown in **Step 2** to ensure the drilling hole position and orientation is correct.

### STEP 2

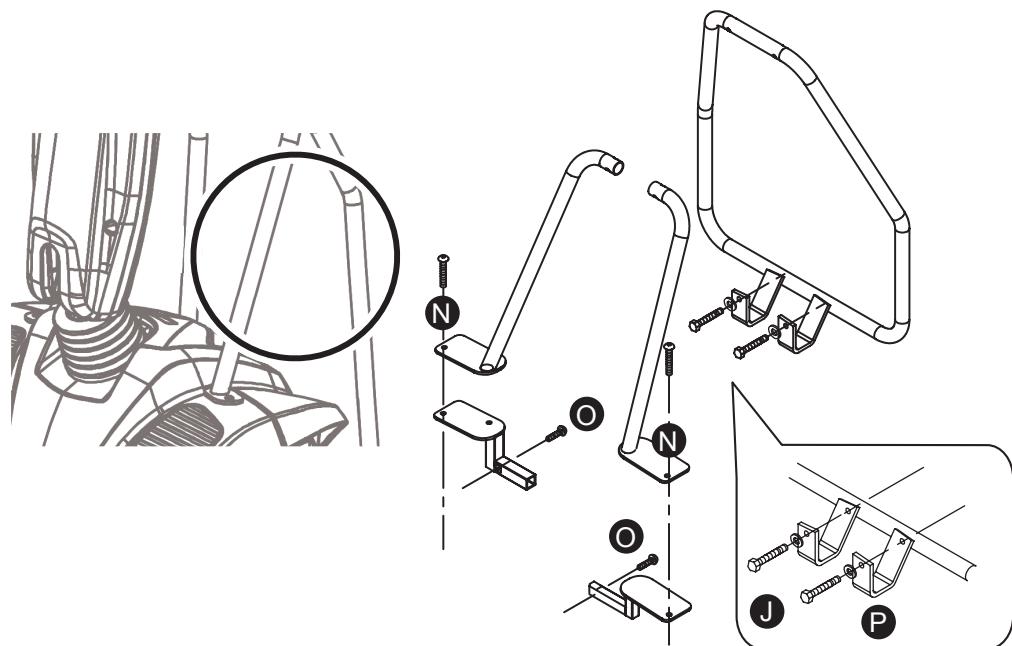


### STEP 3

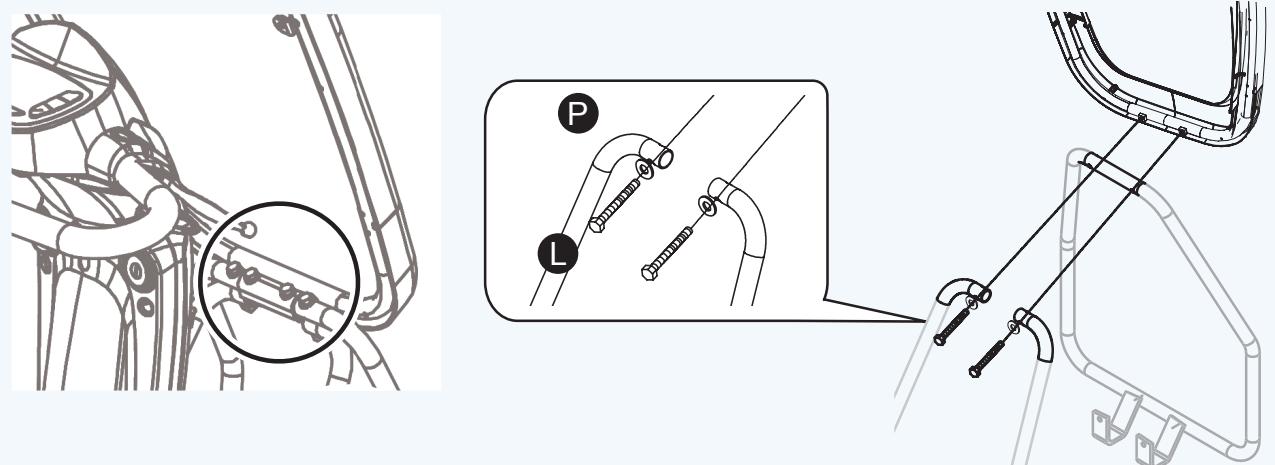

## Installation Steps

### Hard Top Sun Canopy | Aspire Odin Scooter

Follow steps below in order when selecting what to fix to the scooter.

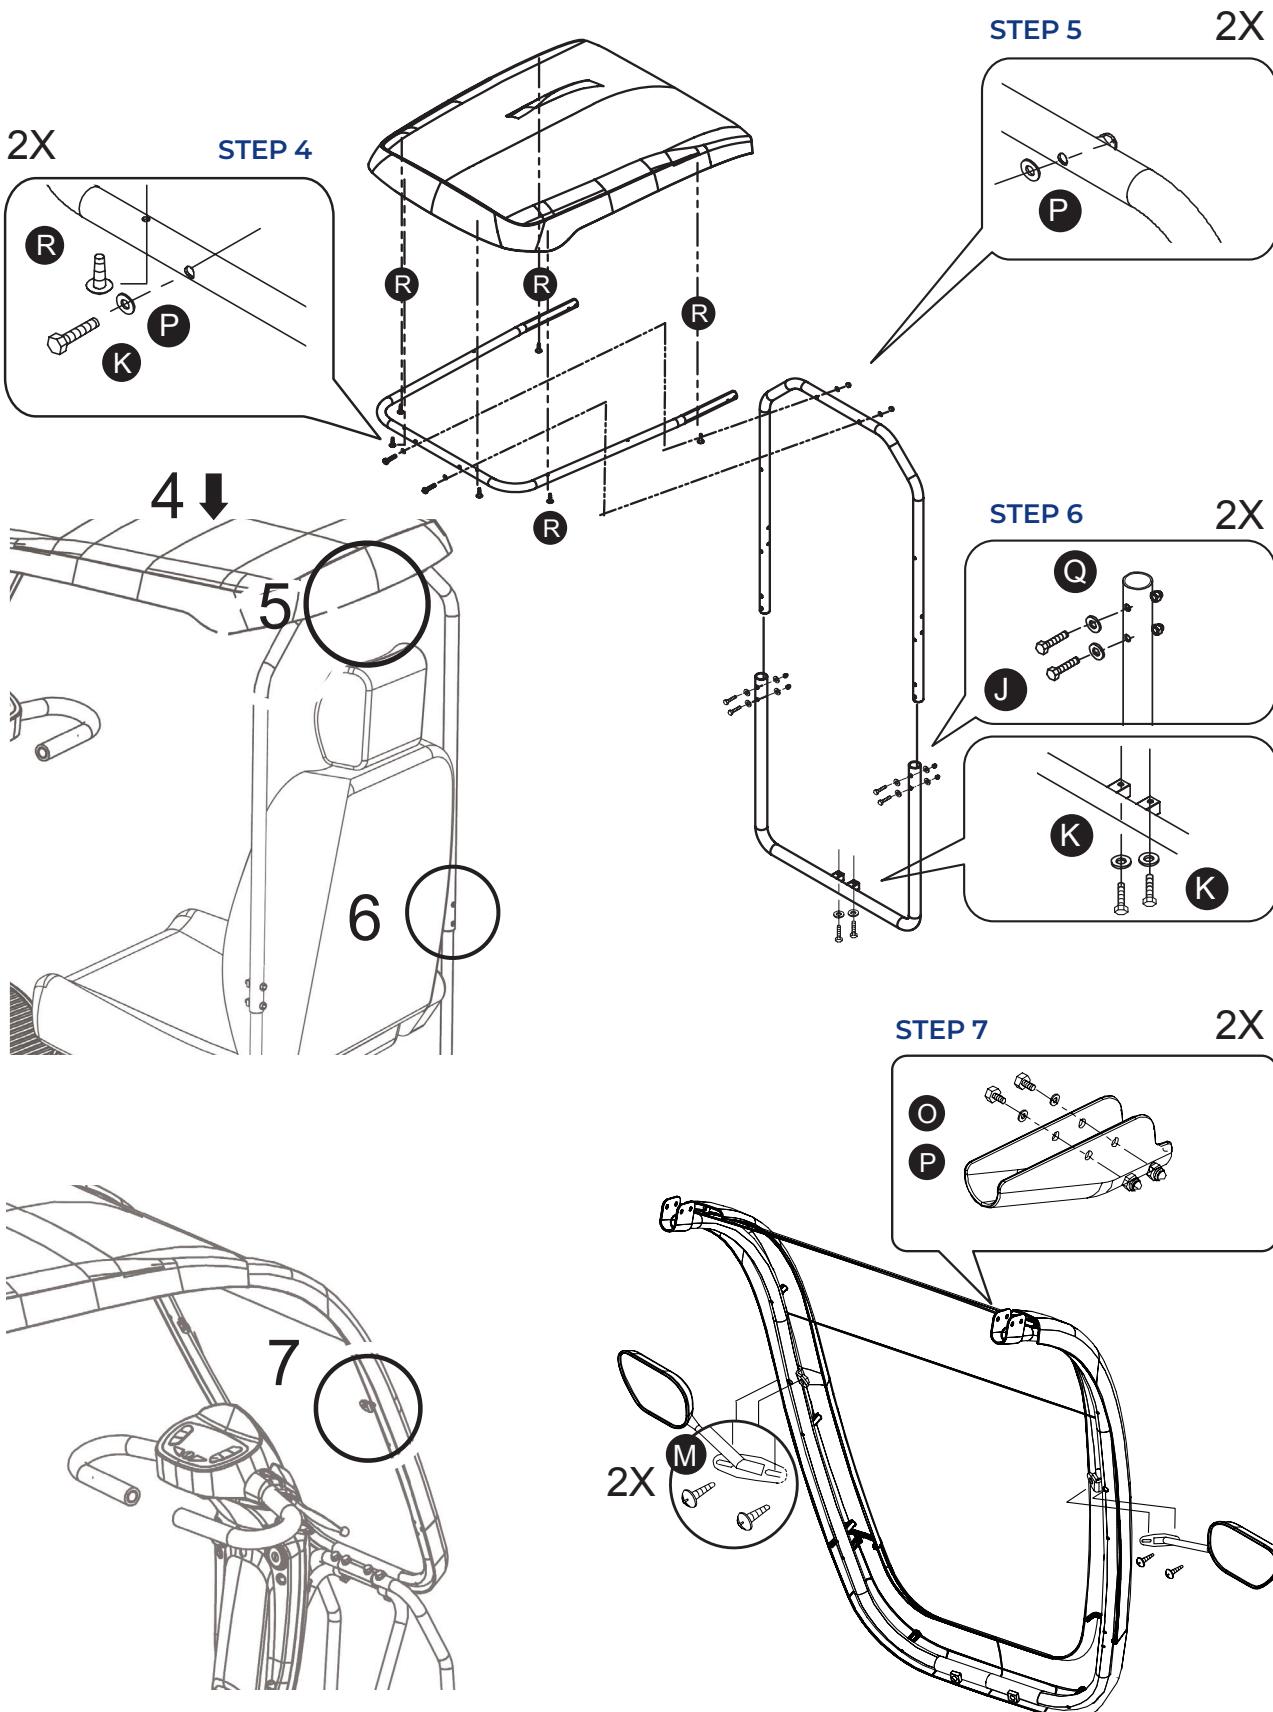

# Installation Steps

## Weather Shield | Aspire Odin Scooter




Follow steps below in order when selecting what to fix to the scooter.

A-1 A-2


B

C

D

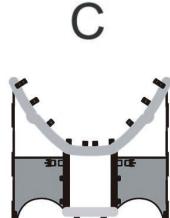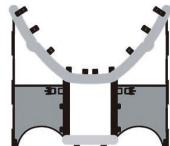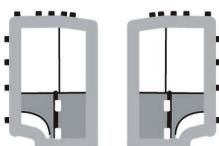


x8

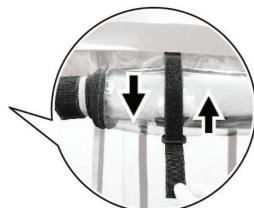

1



2


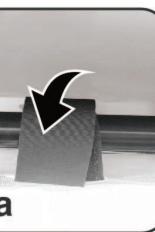


3





A-1

1

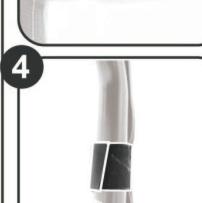
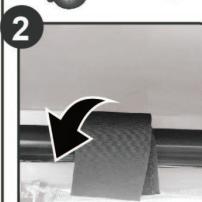


3

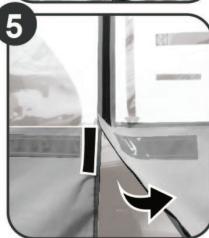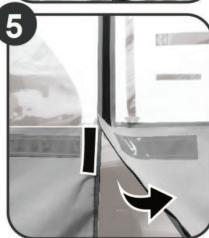


A-2

1

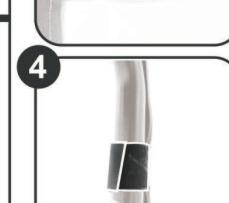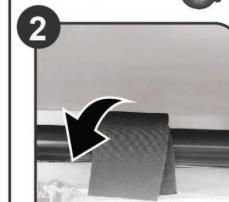


3

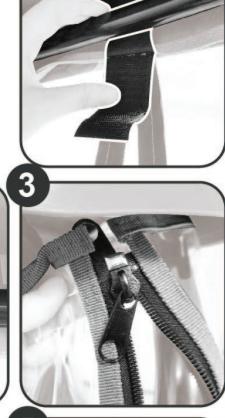


C

1

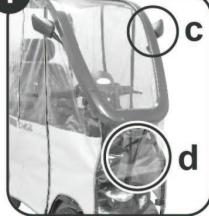


2

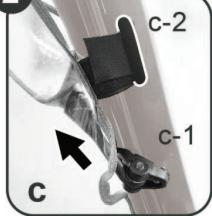

3



4

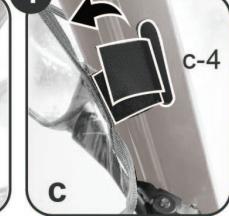

5

